

Current Sensor

CS-675 Series - Installation Instructions

INTRODUCTION

The CS-675 series current sensor monitors line current for electrical loads such as pumps, conveyors, machine tools or fans and outputs an analog true RMS 4-20 mA signal to represent the load current.

The sensor is loop powered and requires an external 15-30 Vdc power supply. The power supply must be 10 Vdc + (Rload x 20 mA) where Rload is the input resistance of the device measuring the signal. So if Rload is 250 Ω the minimum power supply is 15 Vdc. The measured AC line current can be calculated as lline = (lloop – 4 mA) x lrange / 16. The device is factory calibrated to $< \pm 2\%$ FSO and features either three jumper-selectable current ranges or fixed range models

The sensors are typically used to monitor motor operation and can be used to determine motor failure, belt loss, machine feed rates or tool wear.



- Electric shock hazard, use caution
- Disconnect and lock out power before installation
- Follow national and local electrical codes
- Read and understand these instructions before installing
- Installation only by qualified electrical personnel
- Do not rely on this device to indicate line power
- Only install this device on insulated conductors
- Only install on 600 Vac maximum conductors
- Do not use this device for life-safety applications
- Do not install in hazardous or classified locations
- Install this product in a suitable electrical enclosure
- Failure to follow these instructions will result in death or serious injury

INSTALLATION


Read all warnings before beginning. Ensure the selected device has the correct ratings for your application. Set the range jumper to the desired range. See Figure 1. The CS-675-2, 5 & 200 each have one fixed range. See Figure 2.


Disconnect and lock out power. Mount the sensor with two screws through the base or snap onto a standard DIN mounting rail. The base has an integrated mounting tab to allow either screw mount to a surface or spring mount to a DIN rail.

To mount the device to a flat surface, select an area that will allow side and top access to wire device. Slide the mounting tab in so that both mounting holes are accessible. If predrilling is required, the actual device may be used to mark holes or simply cut out the pattern below in Figure 3. The mounting holes in the base will accommodate up to a #10 size screw (Not supplied). See Figure 3

For DIN rail mounting, first slide the mounting tab to its outer position and then hook the fixed end to the DIN rail and finally the tab end may be snapped onto the rail. The tab may be pulled out slightly to allow easier mounting or to remove the device from the rail. See Figure 4.

Place the monitored conductor (must be insulated) through the sensor hole and reconnect. See Figure 5. Observe polarity and wire the output to the controller. Use 14-22 AWG shielded wiring for all connections and do not locate the device wires in the same conduit with wiring used to supply inductive loads such as motors.

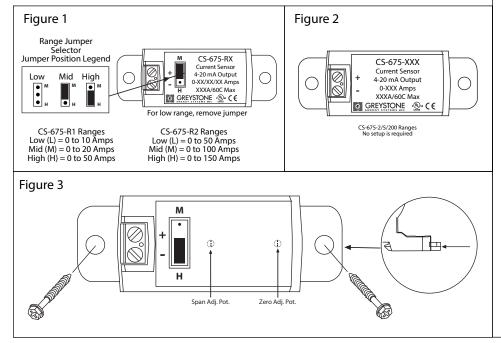

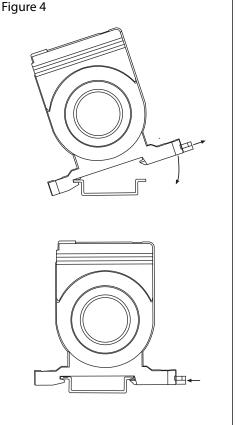


Page 1

APPLICATION

The CS-675 series are factory calibrated to operate within $\pm 2\%$ of FSO. If field calibration is required or a custom measurement range is desired, simply peel back the top label to expose the calibration pots. See Figure 3 . The adjustment pots set the current zero (4 mA) and span (20 mA) of the device and may be adjusted by about $\pm 20\%$ of FSO. Repeat each adjustment until both are acceptable.

For applications with load currents exceeding the sensor current ranges use an external CT to reduce the current to an acceptable value. For example, to measure a 500 Amp load current, use a 500A:5A CT and wrap the CT secondary through the CS-675-5 so the sensor output will be 4-20 mA = 0-500 Amps.

For applications with small load currents (such as less than 2 Amps), wrap the monitored conductor through the sensor aperture several times to increase the current measured by the sensor. For example, to measure 0-1 Amp with a CS-675-5, wrap the conductor through the sensor aperture 5 times so the sensor output will be 4-20 mA = 0-1 Amp.

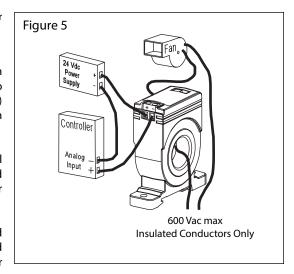

For external CT or multiple wrap applications, ensure the controller is scaled accordingly to obtain correct readings.


For any application with multiple wraps, note that the CS-675 maximum current rating must be divided by the number of wraps. For example, with one wrap the maximum current is 100 Amps for the 50 Amp range, with 5 wraps the maximum current is 100/5 = 20 Amps. Ensure the load current is < 20 Amps or the device may overheat and be damaged.


Note: These may not be practical applications, select the correct device for the current range required.


SPECIFICATIONS


Measurement Range	CS-675-2: 0-2 Amps	
asa.cc	CS-675-5: 0-5 Amps	
	CS-675-R1: 0-10/20/50 Amps	
	CS-675-R2: 0-50/100/150 Amps	
	CS-675-200: 0-200 Amps	
Maximum Input Current	CS-675-2: 10 Amps continuous	
Maximum input current	CS-675-5: 15 Amps continuous	
	CS-675-R1: 3x range continuous	
	CS-675-R2: 2x range continuous	
A	CS-675-200: 250 Amps continuous	
Accuracy	CS-675-R1/R2: ±2% FSO (5 to 100% of range)	,
S. 10	CS-675-2, 5, & 200: ±1% FSO (5 to 100% of rar	nge)
Signal Output		
Sensor Power		
Insulation Class		
Frequency		
Response Time		5
Output Load	250 Ω typical	-
Maximum Load	>600 Ω @ 24 Vdc	4
Operating Temperature	15 to 60°C (5 to 140°F)	
Operating Humidity	5 to 90 %RH non-condensing	rent
Terminal Block	14 to 22 AWG	<u>,</u>
Dimensions	67 x 68.6 x 24.1 mm	nput Current
	(2.65 x 2.7 x 0.95 in)	du 1
Sensor Aperture	20.3 mm (0.8 in)	- 1
Enclosure Material		
Agency Approvals		
60.1		

.Canada

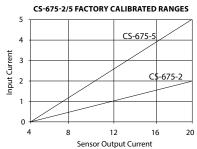

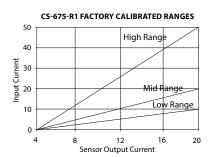

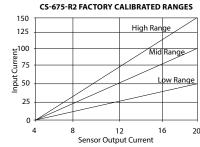

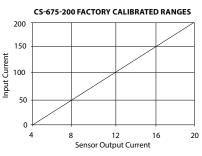



Country of Origin.

